## GROUP ASSEMBLY PARTS LIST

Figure and Index Number	SPCC-MFR Number	Hamilton Part Number	1	2	Part	Nan 4	ne 5	6	Units Per Assy
	H18-HM-10028	42298	Î	Case and Movement Assembly					
	H18-HM-10029	42296		Case - Complete with bezel and bra					Ref
107-1	H18-HM-10023	42101		Case - Chronometer					
107-2	H18-HM-10030	*42102		Bezel - Complete with crystal					
107-3	H18-HM-10039	42102		Crystal					
107-4	H18-HM-10040	42105			Bracket - Case support, complete				
101-4	H10-HM-10031	42103				ы	acke		
107-5	H18-HM-10038	42117				C.		with bushing	2 4 2
107-6	H18-HM-10038	42214		Screw - Case support bracket					
107-6				Bushing - Pivot screw					
101-1	H18-HM-10035	42113				Ke	eper	- Latch, complete with s	steady
107-8	H18-HM-10012	42116				C.		pins	1
107-9	H18-HM-10012	42128		Screw - Latch keeper Washer - Separating					
107-10	H18-HM-10036	42126						r - Separating · Shield	1
107-10		42124							1
	H18-HM-10034							- Shield plate shoulder	1
107-12	H18-HM-10033	42125						- Shield plate stop	1
107-13	H18-HM-10031	42126		Spring - Shield plate return Movement Assembly - Chronometer,					
107-14	H18-HM-10041	*42000			Me	ovem		-size, model 21	, 1
107-15	H18-HM-10216	42033				На		Minute	(0) 1
107-16	H18-HM-10215	42032						Hour	1
107-17	H18-HM-10217	42034						Second, complete with pi	n 1
107-18	H18-HM-10218	42035						Wind indicator	1
107-19	H18-HM-10219	42030						Modern arabic numeral s	tyle 1
107-20	H18-HM-10219	35756						- Dial	4
107-21	H18-HM-10221	42081						- Wind indicator, complet	te
101.21	1110 1111-10221	12001				""	1001	with hub	1
107-22	H18-HM-10222	42080				W	neel	- Hour, complete with hul	b 1
107-23	H18-HM-10223	42078		Wheel - Minute, complete with pinion					
107-24	H18-HM-10224	42077		Pinion - Cannon					

## Group Assembly Parts List

The Group Assembly Parts List, together with its exploded views, lists and illustrates the complete disassembly of the Hamilton Ship Chronometer. This breakdown covers, in logical sequence, all operations beginning with the removal of the chronometer from its gimbals to the removal of the bushings from the pillar plate, including some operations ordinarily not performed in chronometer overhaul. Such arrangement not only allows for a complete and logical listing of maintenance parts, but also serves as a reliable supplement to the sections on disassembly, Section V, and reassembly, Section VIII.

The Group Assembly Parts List is indented to indicate the correct relationship of each part to its next higher assembly. The attaching parts for each assembly are listed directly following that assembly, before the assembly is "broken down."

Some component parts are starred (\*) with the note "not recommended for stocking." This note is added for one of two reasons. One reason may be that the manufacturer recommends some parts be purchased as assemblies rather than as component parts because assembling the parts may require special equipment not ordinarily found at repair stations. The other reason may be that experience has shown that some starred parts are not likely to be needed for replacement purposes.

## Numerical Parts List

A Numerical Parts List is included as Section XII to aid identification when only the Hamilton part number is known. All Hamilton numbered parts are included, in numerical sequence, together with figure and index numbers referring to that component. The figure and index numbers indicate immediately the location of the component in both the exploded views and Group Assembly Parts List.

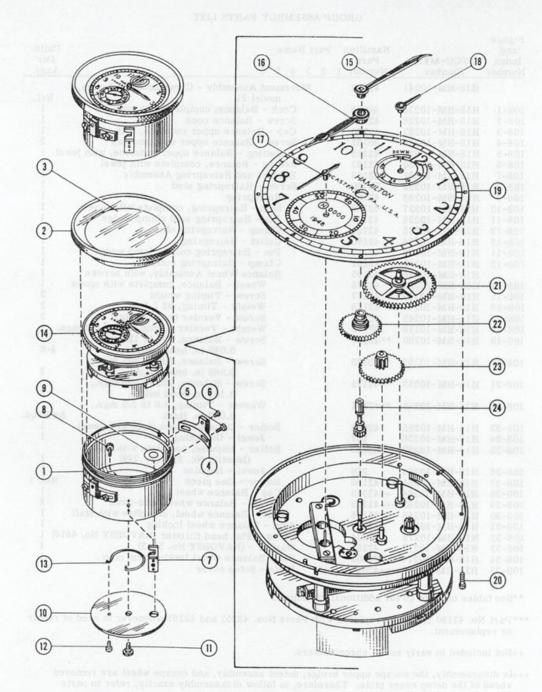


Figure 107

RESTRICTED

<sup>\*</sup>Not recommended for stocking.