

GROUP ASSEMBLY PARTS LIST

Figure and Index Number	SPCC-MFR Number	Hamilton Part Number	Part Name						Units Per Assy.
			1	2	3	4	5	6	
108-36	H18-HM-10109	42056	Screw - Setup cover plate						2
108-37	H18-HM-10281	42026	Wheel - Setup ratchet						1
108-38	H18-HM-10282	42027	Pawl - Setup						1
108-39	H18-HM-10283	42051	Seal - Dust						1
108-36	H18-HM-10109	42056	Screw - Dust seal						2
108-40	H18-HM-10284	42054	Ring - Packing						3
108-41	H18-HM-10285	42052	Ring - Seal						1
108-42	H18-HM-10286	42053	Spring - Helical seal						1
108-43	H18-HM-10287	42061	Bridge - Barrel, complete with pins						1
108-44	H18-HM-10288	42055	Screw - Barrel bridge pillar						1
108-44	H18-HM-10288	42055	Screw - Barrel bridge						2
108-45	H18-HM-10289	42164	Bushing - Barrel upper						1
108-45	H18-HM-10289	42164	Bushing - Fusee upper						1
108-46	H18-HM-10290	42028	Spring - Setup pawl, complete with pins						1
108-47	H18-HM-10291	42036	Screw - Setup pawl pivot						1
108-48	H18-HM-10292	42099	Stop - Fusee winding stop-bar						1
108-49	H18-HM-10293	42242	Barrel Assembly						1
109-1	H18-HM-10294	*42169	Cap - Barrel						1
109-2	H18-HM-10102	37023	Screw - Barrel cap						5
109-3	H18-HM-10295	42170	Arbor - Barrel						1
109-4	H18-HM-10296	42038	Mainspring - Complete with anchor pin, 0.0165 ± $\frac{5}{0}$ in. thick						1
109-5	H18-HM-10297	42037	Brace - Mainspring						1
109-6	H18-HM-10298	*42168	Barrel - Mainspring, complete with anchor pin						1
108-50	H18-HM-10299	42006	Fusee Assembly						1
109-7	H18-HM-10300	42020	Pin - Taper, fusee assembly						1
109-8	H18-HM-10301	42019	Plate - Fusee end						1
109-9	H18-HM-10302	42015	Wheel - Fusee						1
109-10	H18-HM-10303	42016	Spring - Sustaining, complete with pins						1
109-10	H18-HM-10304	42009A	Wheel Assembly - Sustaining ratchet, complete with pawls, springs and screws						1
109-11	H18-HM-10305	42009	Wheel - Sustaining ratchet, complete with pawls						1
109-12	H18-HM-10306	42007	Spring - Winding pawl, complete with pins						2
109-13	H18-HM-10307	42012	Screw - Winding pawl spring						4
109-14	H18-HM-10308	42013	Wheel - Winding ratchet						1
109-15	H18-HM-10309	42014	Screw - Winding ratchet wheel						2
109-16	H18-HM-10310	42008	Plate - Fusee top						1
109-17	H18-HM-10232	27760	Screw - Fusee top plate						2
109-18	H18-HM-10311	42025	Spring - Winding stop-bar						1
109-19	H18-HM-10312	42024	Stop-bar - Winding						1
109-20	H18-HM-10313	42021	Fusee - Complete with arbor						1
109-21	H18-HM-10314	*42022	Arbor - Fusee, complete with wind indicator pinion						1
109-22	H18-HM-10315	42001	Fusee Chain Assembly						1

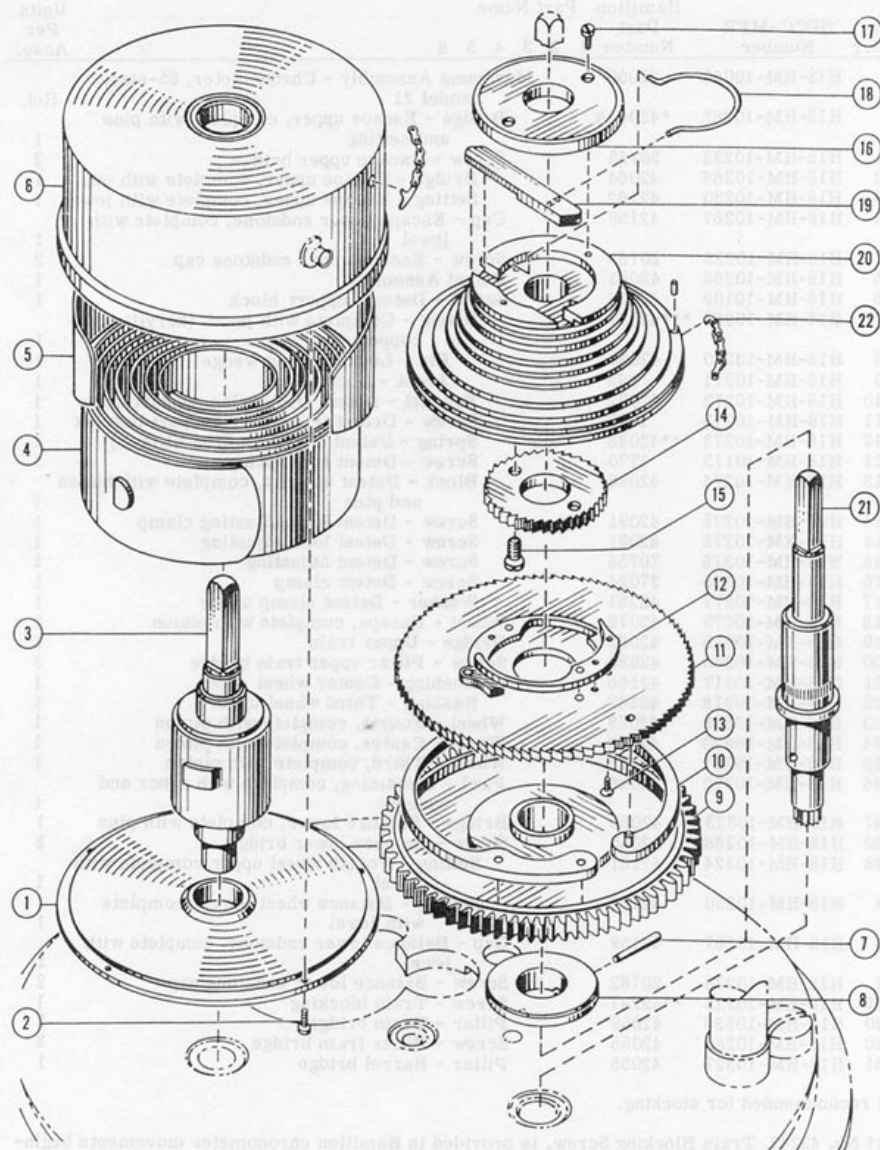


Figure 109

\*Not recommended for stocking.